

13.3 inch
B/W E-paper Signage
IC-33133V-BWUX1A

Product Specifications



Customer	Standard
Description	13.3" B/W E-PAPER SIGNAGE
Model Name	IC-33133V-BWUX1A
Date	2024/05/09
Revision	1.0

Contents

- 1.Overview.....4
- 2.Features.....4
- 3.Technical Parameters..... 4
- 4.Product Structure..... 5
- 5.Update pictures via USB.....8
- 6.Update pictures via Wifi..... 11
- 7.Packaging and installation..... 12
- 8.Precautions..... 14

1. Overview

The 13.3-inch black and white E Ink display sign utilizes E Ink's bistable display technology. It employs remote wireless transmission to update content, saving on manpower deployment and printing costs, while maintaining continuous display without power consumption, thus enhancing operational efficiency and significantly reducing resource consumption, thereby combining intelligence with environmental benefits. The E Ink display sign possesses high mobility, achieving effective short-term communication effects in any dissemination space, making it an ideal alternative to traditional paper advertising posters. Its long-term use reduces electricity costs substantially and enhancing profitability.

2. Features

- Ultra-wide viewing angle, ultra-low power consumption
- Bi-stable display (last image displayed even after power outage)
- Display can be updated via USB or WiFi
- Image requirements: BMP, PNG, JPG

3. Parameters

Model	IC-33133V-BWUX1A
E Ink Display	Screen size: 13.3 inch Screen type: black/white electronic paper display Resolution: 1600x1200 Grayscale: 16 gray
Port	USB2.0: One way HOST, one way OTG HDMI-OUT: 1 channel RJ45: 1 channel 10M/100M adaptive TF: reserved (maximum expansion 128G) KEY: POWER, UP, DOWN, RESET
Power consumption	Power supply method: 12-20V/2A power adapter Refresh power: ≤3.5W Standby power: ≤0.01W Built-in battery: no battery


Software	Picture update time: 2s Image update method: USB or WiFi update Language: Sync phone language
Motherboard	WiFi band: 2.4G Bluetooth: 4.0 (Bluetooth update pictures are not supported yet) System: Android 7.1 CPU: 4-core ARM Cortex A7 DDR: 1G EMMC: 8G
Front light	Power: ≤2.16W
Waterproof level	IP65
Specifications	Weight: about 5.75kg Overall dimensions: 375x250x65mm
Temperature and humidity	Operating temperature : -15°C~65°C Storage temperature : -25°C~70°C Working humidity: 20%~90%

4. Structure



External power supply interface

Figure 1 IC-33133V-BWUX1A front view

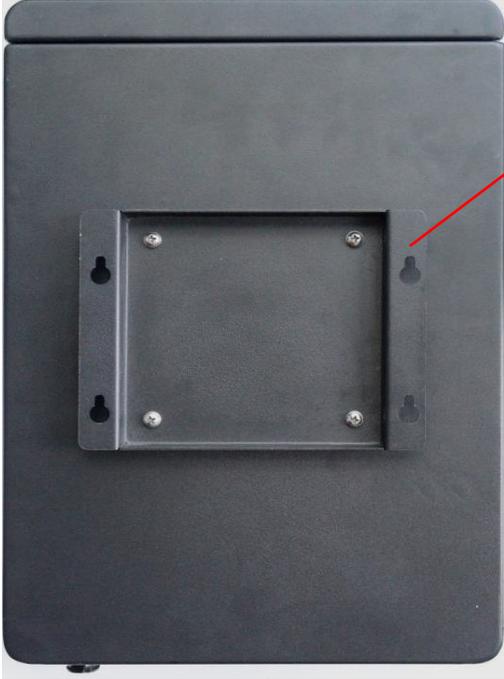

Mounting bracket



Anti-theft lock

Figure 2 IC-33133V-BWUX1A back view

Figure 3 IC-33133V-BWUX1A side view 1



Figure 4 IC-33133V-BWUX1A side view 2

① Power Button

Press to turn the main power on or off. A short press will start the signboard, and the LED light will illuminate. Press the power button again to turn off the signboard, and the LED light will go off.

② RESET Button

A light press initiates a system reset for the signboard.

③ UP Button

A. During the signboard's image update process, press once to switch to the next displayed image. The system must retain at least 2 images.;

B. Press and hold for 3 to 10 seconds, then release to display the current network configuration guide interface. Scan the QR code on the left with your phone to download the app. After downloading and installing the app, scan the QR code on the right to connect to the wireless router;



C. Press and hold for more than 10 seconds, then release to turn the front light on or off.

④ DOWN Button

A. Press once to switch to the next displayed image. The system must retain at least 2 images.;

B. Press and hold for 3 to 10 seconds, then release to view system status information.



⑤ HDMI-OUT

For internal debugging use

⑥ Memory card interface

Insert Micro SD card

⑦ Network interface

Insert a wired network connection

⑧ USB 2.0 and OTG interface

Used for USB functions, motherboard debugging, and firmware upgrades

5. Update Images via USB

5.1. Images Requirements


1. Formats: bmp, png, jpg;
2. Resolution: supports 1600*1200.

5.2. Image Processing


1. Install the image conversion tool xtacepSetup-V2.5.3.exe. Typically installed on drive D of the computer. After installation, a folder named XT Image Processing Tool will appear on drive D. Inside this folder, you will find the following files;

 ACEP	2023/11/3 16:40
 jre1.8.0_161	2023/11/3 16:40
 Log	2023/9/1 18:14
 unins000.dat	2023/11/3 16:40
 unins000.exe	2023/11/3 16:39
 xtacep.exe	2023/10/25 16:04

- 2. Place the images to be updated on drive D, and save them to a newly created folder. Avoid spaces in the image path and filename;
- 3. Open the installed xtacep.exe software;

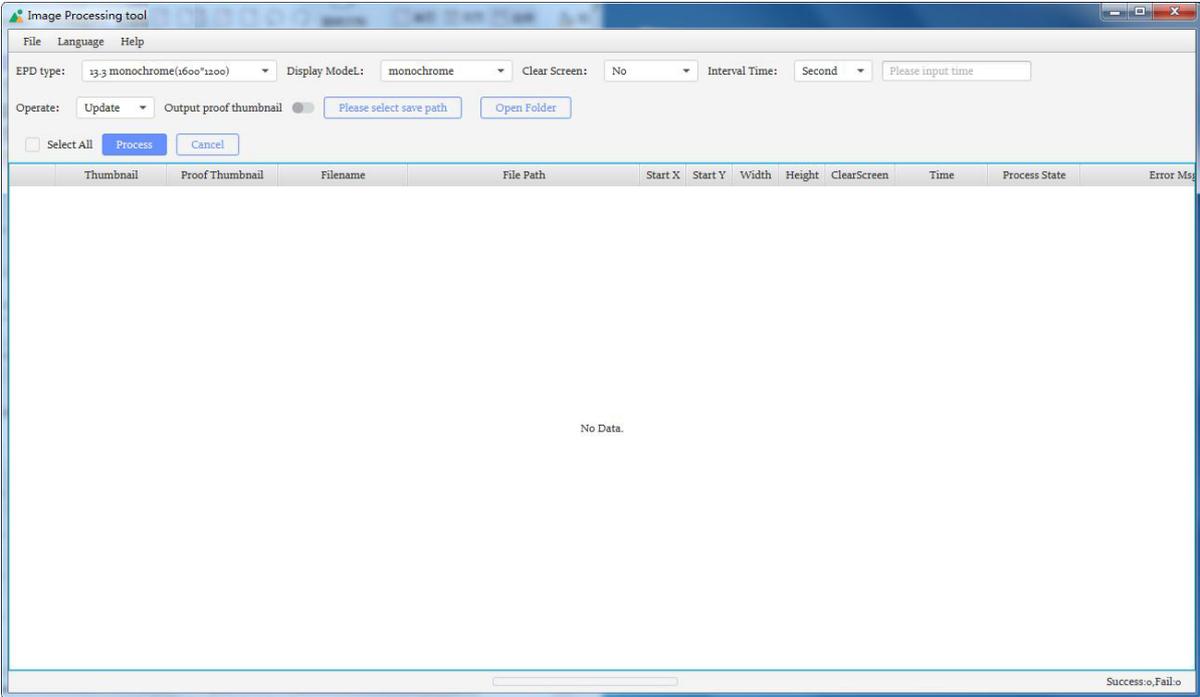

- 4. Click on "File" in the upper left corner, and load the folder containing the images to be updated according to the path.

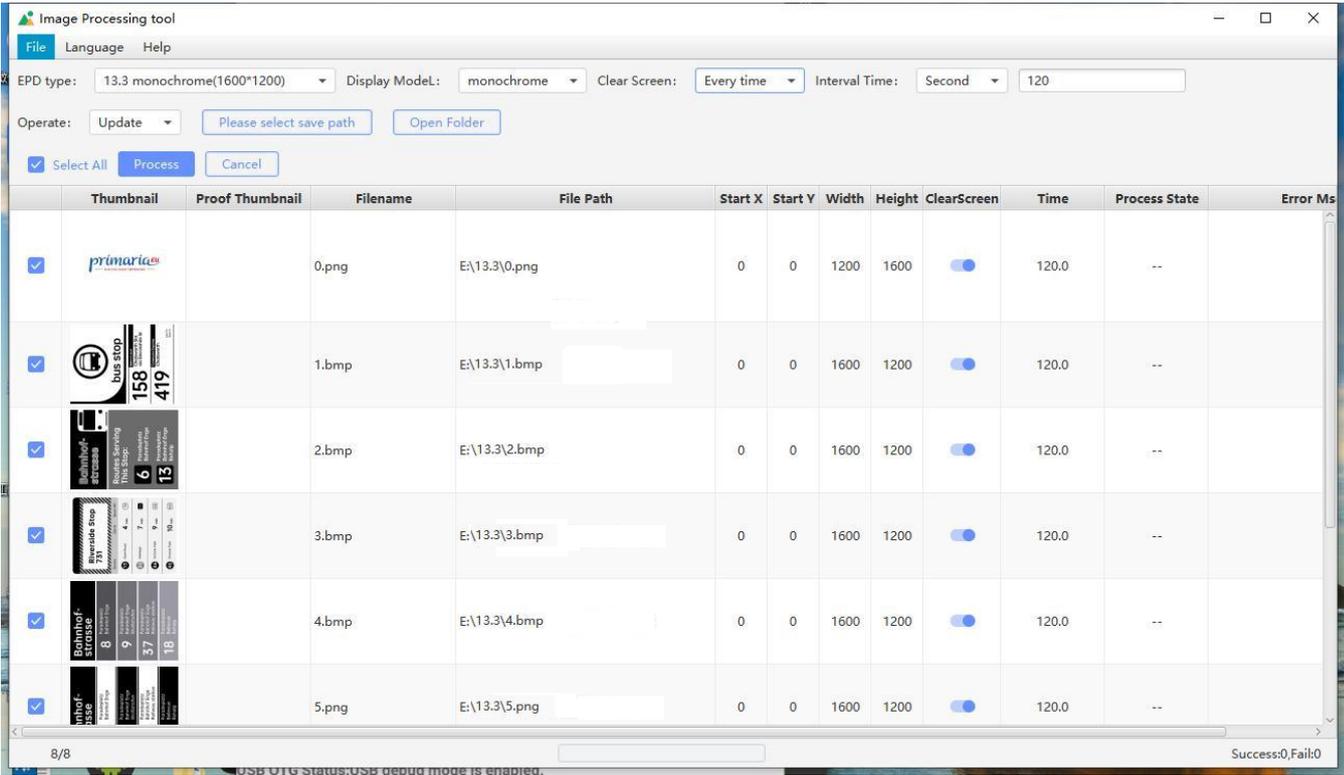


5. Image Resource Package Parameter Settings:

In the top left corner of "EPD type," select the current product model. Choose 6. "monochrome" for Display mode, "No" for Clear screen, and "Second" for Interval Time. Finally, input the flashing interval in seconds in the blank space (default is 30 seconds, exceeding 300 seconds will put the system into sleep mode).

6. Select "Update" for Operate, click the "Please select save path" button, and choose a path to save the processed images. Select "Select All" to choose all the images.

7. Click "Process," at this point, the software will begin processing the images, and the current progress will be displayed at the bottom of the software.

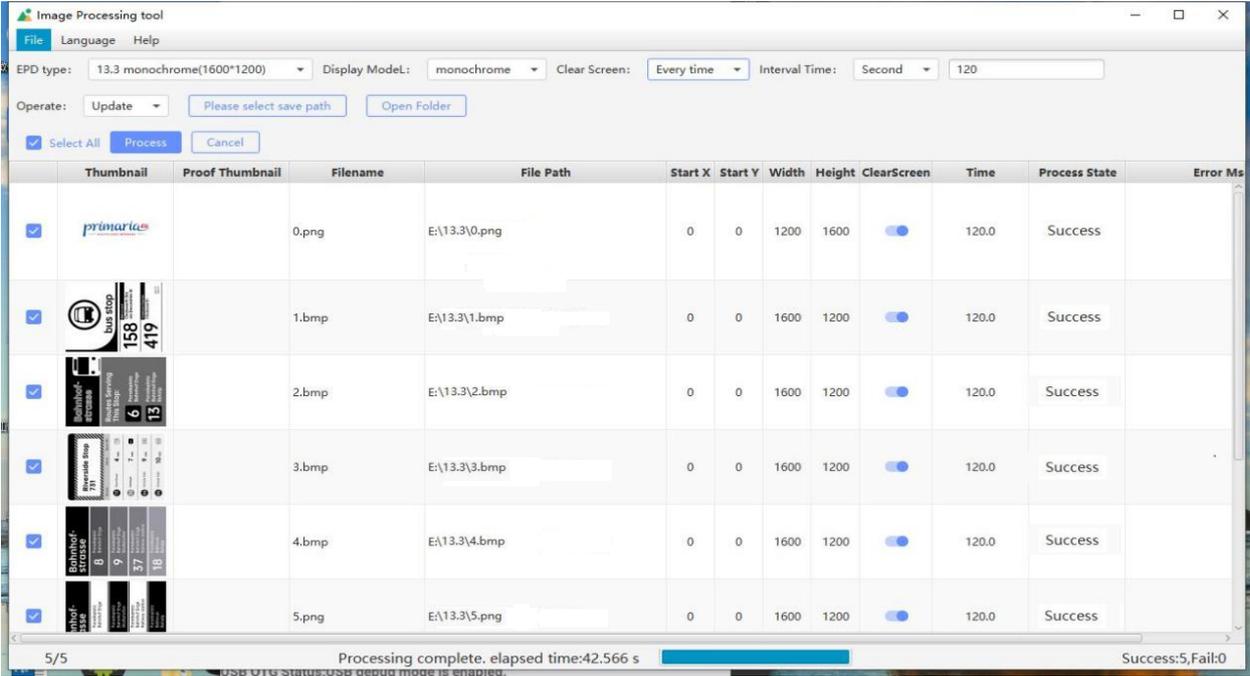

8. Once all images have been converted, you can click the "Open Folder" button in the software to view the created images. The created images will automatically generate an XT_Resources folder, and the converted images will be saved in the image folder.



5.3. Copy Images

Copy the XT_Resources folder to the root directory of the USB flash drive.

5.4. Image Display

1. Insert the USB flash drive into the USB 2.0 port of the machine. Wait for about 30 seconds, and the signboard will automatically refresh the images from the USB flash drive;
2. After the signboard displays the images from the USB flash drive, you can remove the flash drive and use the UP and DOWN keys to switch between displaying the images.

6. Update Image via Wifi

6.1. Install APP

Press and hold the UP button for 3 seconds to 10 seconds and release it to display the current distribution network guidance interface. Scan the QR code on the left with your mobile phone to download the APP. After downloading and installing the APP, scan the QR code on the right to download the APP. Unable to configure the router.




6.2. Network Configuration

1. In the app, select Resources  and click on the plus  in the icon upper right corner to enter the image addition interface.
2. Select the button **Scan code to add** add the QR code on the right, and fill in the device name and other information. And start to configure the network for the device, and you need to send the WiFi password to the device with the help of the Bluetooth of the mobile phone. Note: The device needs to be restarted after the network configuration is complete.

6.3. Image Display:

1. Check whether the device is online in the APP, if not, please manually pull down to update the device status.
2. Click on the online sign, find the Publish List **Publish List** , and click to enter the publishing list interface.
3. Click on Add Publishing **Add Publication** to enter the publishing plan setting interface.
4. Set the plan name, screen stay time (refresh interval between two images), and the images to be displayed. After setting everything, click the OK button below **Confirm** . The software will then prompt with a success message. After successful publishing, the sign will play the images in the order selected in the publishing list.

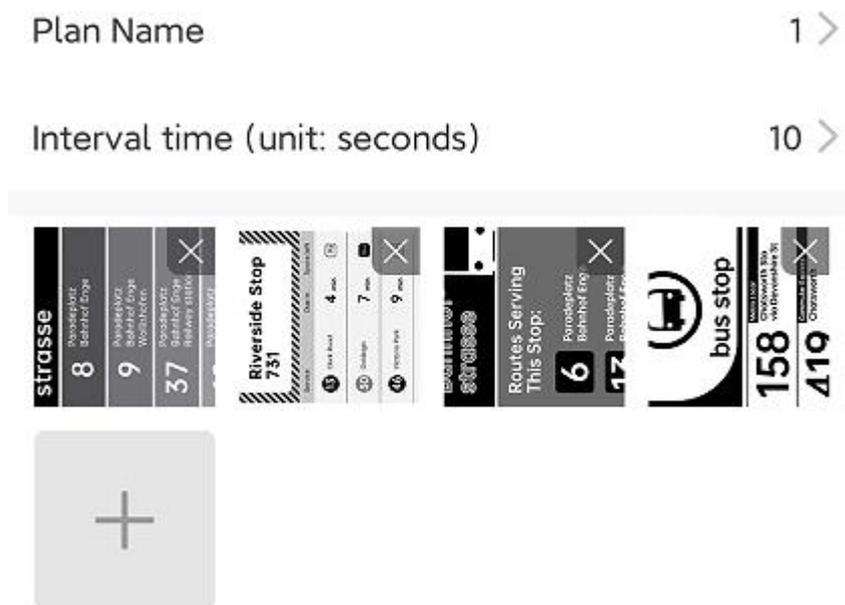


7. Packaging and installation

7.1 Please verify that you have received the following items included in the package:

- Epaper display signage x1
- Power adapter x1
- Key x1



Epaper display signage

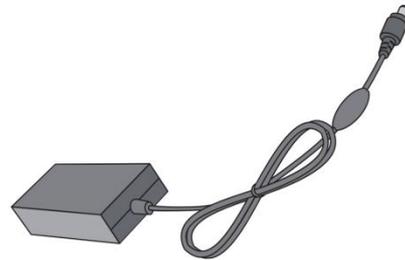

Power adapter



Key

7.2 Product installation

1. The product should be installed on a flat surface, otherwise the product may fall over. Leave space between the back of the product and the wall for proper ventilation. Do not install the product in the kitchen, bathroom or in places exposed to moisture, otherwise the service life of the product may be shortened.
2. Please do not install the product at an altitude of 3,000 meters or above. Otherwise it may cause malfunction.

8.Precautions

8.1 Transportation precautions

1. Pay attention to waterproofing during transportation to avoid damage to the display sign;
2. Be careful not to squeeze the display sign during transportation to prevent screen damage;
3. During transportation, pay attention to the ambient temperature not exceeding 65°C.

8.2 Precautions for use

1. The ambient temperature of the display sign is controlled between -15°C-65°C;
2. Clean the screen regularly to ensure that the displayed signs are clean and tidy;
3. Please do not dismantle the display sign without permission;
4. Pay attention to waterproofing during use and do not expose it to water;
5. Pay attention to avoid collisions during use

8.3 Storage considerations

The storage environment must be fire-proof, moisture-proof (humidity should not be higher than 90%), high temperature (temperature should not be higher than 70°C), backlog, dirt, heavy objects extrusion, and breakage;